

Redundant Power Unit

Fault-tolerant networking!

- Supports up to four switch units
- AC line draws power from different supply circuit
- DC line provides backup power to attached devices
- Thermal overload protection
- Over-voltage protection for each output channel
- Over-current protection can shut down the RPU
- Short-circuit protection against output channels



Redundant Power Unit User Guide

Powers up to four SMC networking devices

SMC[®]

Networks

38 Tesla

Irvine, CA 92618

Phone: (949) 679-8000

January 2005

Pub. # 150200050500A R01

Information furnished by SMC Networks, Inc. (SMC) is believed to be accurate and reliable. However, no responsibility is assumed by SMC for its use, nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of SMC. SMC reserves the right to change specifications at any time without notice.

Copyright © 2005 by

SMC Networks, Inc.

38 Tesla

Irvine, CA 92618

All rights reserved. Printed in Taiwan

Trademarks:

SMC is a registered trademark of SMC Networks, Inc. Other product and company names are trademarks or registered trademarks of their respective holders.

LIMITED WARRANTY

Limited Warranty Statement: SMC Networks, Inc. (“SMC”) warrants its products to be free from defects in workmanship and materials, under normal use and service, for the applicable warranty term. All SMC products carry a standard 90-day limited warranty from the date of purchase from SMC or its Authorized Reseller. SMC may, at its own discretion, repair or replace any product not operating as warranted with a similar or functionally equivalent product, during the applicable warranty term. SMC will endeavor to repair or replace any product returned under warranty within 30 days of receipt of the product.

The standard limited warranty can be upgraded to a Limited Lifetime* warranty by registering new products within 30 days of purchase from SMC or its Authorized Reseller. Registration can be accomplished via the enclosed product registration card or online via the SMC web site. Failure to register will not affect the standard limited warranty. The Limited Lifetime warranty covers a product during the Life of that Product, which is defined as the period of time during which the product is an “Active” SMC product. A product is considered to be “Active” while it is listed on the current SMC price list. As new technologies emerge, older technologies become obsolete and SMC will, at its discretion, replace an older product in its product line with one that incorporates these newer technologies. At that point, the obsolete product is discontinued and is no longer an “Active” SMC product. A list of discontinued products with their respective dates of discontinuance can be found at http://www.smc.com/smc/pages_html/support.html.

All products that are replaced become the property of SMC. Replacement products may be either new or reconditioned. Any replaced or repaired product carries either a 30-day limited warranty or the remainder of the initial warranty, whichever is longer. SMC is not responsible for any custom software or firmware, configuration information, or memory data of Customer contained in, stored on, or integrated with any products returned to SMC pursuant to any warranty. Products returned to SMC should have any customer-installed accessory or add-on components, such as expansion modules, removed prior to returning the product for replacement. SMC is not responsible for these items if they are returned with the product.

Customers must contact SMC for a Return Material Authorization number prior to returning any product to SMC. Proof of purchase may be required. Any product returned to SMC without a valid Return Material Authorization (RMA) number clearly marked on the outside of the package will be returned to customers at customer's expense. For warranty claims within North America, please call our toll-free customer support number at (800) 762-4968. Customers are responsible for all shipping charges from their facility to SMC. SMC is responsible for return shipping charges from SMC to customer.

LIMITED WARRANTY

WARRANTIES EXCLUSIVE: IF AN SMC PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, CUSTOMER'S SOLE REMEDY SHALL BE REPAIR OR REPLACEMENT OF THE PRODUCT IN QUESTION, AT SMC'S OPTION. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. SMC NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE OR USE OF ITS PRODUCTS. SMC SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OR OTHER HAZARD.

LIMITATION OF LIABILITY: IN NO EVENT, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), SHALL SMC BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE, LOSS OF BUSINESS, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF ITS PRODUCTS, EVEN IF SMC OR ITS AUTHORIZED RESELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

SOME STATES DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR THE LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR CONSUMER PRODUCTS, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, WHICH MAY VARY FROM STATE TO STATE. NOTHING IN THIS WARRANTY SHALL BE TAKEN TO AFFECT YOUR STATUTORY RIGHTS.

* SMC will provide warranty service for one year following discontinuance from the active SMC price list. Under the limited lifetime warranty, internal and external power supplies, fans, and cables are covered by a standard one-year warranty from date of purchase.

SMC Networks, Inc.
38 Tesla
Irvine, CA 92618

COMPLIANCES

FCC - Class B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Industry Canada - Class B

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled “Digital Apparatus,” ICES-003 of the Department of Communications.

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Classe B prescrites dans la norme sur le matériel brouilleur: “Appareils Numériques,” NMB-003 édictée par le ministère des Communications.

Japan VCCI Class B

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると受信障害を引き起こすことがあります。

取り扱い説明書に従って正しい取り扱いをして下さい。

EC Conformance Declaration - Class B

SMC contact for these products in Europe is:

SMC Networks Europe,
Edificio Conata II,
Calle Fructuós Gelabert 6-8, 2^a, 4^a,
08970 - Sant Joan Despí, Barcelona, Spain.

This information technology equipment complies with the requirements of the Council Directive 89/336/EEC on the Approximation of the laws of the Member States relating to Electromagnetic Compatibility and 73/23/EEC for electrical equipment used within certain voltage limits and the Amendment Directive 93/68/EEC. For the evaluation of the compliance with these Directives, the following standards were applied:

- RFI Emission:
- Limit class B according to EN 55022:1998
 - Limit class A for harmonic current emission according to EN 61000-3-2/1995
 - Limitation of voltage fluctuation and flicker in low-voltage supply system according to EN 61000-3-3/1995
- Immunity:
- Product family standard according to EN 55024:1998
 - Electrostatic Discharge according to EN 61000-4-2:1995 (Contact Discharge: ± 4 kV, Air Discharge: ± 8 kV)
 - Radio-frequency electromagnetic field according to EN 61000-4-3:1996 (80 - 1000 MHz with 1 kHz AM 80% Modulation: 3 V/m)
 - Electrical fast transient/burst according to EN 61000-4-4:1995 (AC/DC power supply: ± 1 kV, Data/Signal lines: ± 0.5 kV)
 - Surge immunity test according to EN 61000-4-5:1995 (AC/DC Line to Line: ± 1 kV, AC/DC Line to Earth: ± 2 kV)
 - Immunity to conducted disturbances, Induced by radio-frequency fields: EN 61000-4-6:1996 (0.15 - 80 MHz with 1 kHz AM 80% Modulation: 3 V/m)
 - Power frequency magnetic field immunity test according to EN 61000-4-8:1993 (1 A/m at frequency 50 Hz)
 - Voltage dips, short interruptions and voltage variations immunity test according to EN 61000-4-11:1994 (>95% Reduction @10 ms, 30% Reduction @500 ms, >95% Reduction @5000 ms)
- LVD:
- EN 60950 :2000

Australia AS/NZS 3548 (1995) - Class B



ACN 069 351 613

SMC contact for products in Australia is:

SMC Communications Pty. Ltd.
Suite 18, 12 Tryon Road,
Lindfield NSW2070,
Phone: 61-2-94160437
Fax: 61-2-94160474

Please read the following safety information carefully before installing the RPU:

WARNING: Installation and removal of the unit must be carried out by qualified personnel only.

- This guide is intended for use by network administrators who are responsible for setting up and installing network equipment; consequently it assumes a basic working knowledge of LANs (Local Area Networks).
- The unit must be connected to an earthed (grounded) outlet to comply with international safety standards.
- Do not connect the unit to an A.C. outlet (power supply) without an earth (ground) connection.
- The appliance coupler (the connector to the unit and not the wall plug) must have a configuration for mating with an EN 60320/IEC 320 appliance inlet.
- The socket outlet must be near to the unit and easily accessible. You can only remove power from the unit by disconnecting the power cord from the outlet.
- This unit operates under SELV (Safety Extra Low Voltage) conditions according to IEC 60950. The conditions are only maintained if the equipment to which it is connected also operates under SELV conditions.

COMPLIANCES

France and Peru only

This unit cannot be powered from IT[†] supplies. If your supplies are of IT type, this unit must be powered by 230 V (2P+I) via an isolation transformer ratio 1:1, with the secondary connection point labelled Neutral, connected directly to earth (ground).

† Impédance à la terre

Power Cord Set	
U.S.A. and Canada	The cord set must be UL-approved and CSA certified.
	The minimum specifications for the flexible cord are: - No. 18 AWG - not longer than 2 meters, or 16 AWG. - Type SV or SJ - 3-conductor
	The cord set must have a rated current capacity of at least 10 A.
	The attachment plug must be an earth-grounding type with NEMA 5-15P (15 A, 125 V) or NEMA 6-15P (15 A, 250 V) configuration.
Denmark	The supply plug must comply with Section 107-2-D1, Standard DK2-1a or DK2-5a.
Switzerland	The supply plug must comply with SEV/ASE 1011.
U.K.	The supply plug must comply with BS1363 (3-pin 13 A) and be fitted with a 5 A fuse which complies with BS1362.
	The mains cord must be <HAR> or <BASEC> marked and be of type HO3VVF3GO.75 (minimum).
Europe	The supply plug must comply with CEE7/7 (“SCHUKO”).
	The mains cord must be <HAR> or <BASEC> marked and be of type HO3VVF3GO.75 (minimum).
	IEC-320 receptacle.

Veillez lire à fond l'information de la sécurité suivante avant d'installer le RPU:

AVERTISSEMENT: L'installation et la dépose de ce groupe doivent être confiés à un personnel qualifié.

- Ne branchez pas votre appareil sur une prise secteur (alimentation électrique) lorsqu'il n'y a pas de connexion de mise à la terre (mise à la masse).

- Vous devez raccorder ce groupe à une sortie mise à la terre (mise à la masse) afin de respecter les normes internationales de sécurité.
- Le coupleur d'appareil (le connecteur du groupe et non pas la prise murale) doit respecter une configuration qui permet un branchement sur une entrée d'appareil EN 60320/IEC 320.
- La prise secteur doit se trouver à proximité de l'appareil et son accès doit être facile. Vous ne pouvez mettre l'appareil hors circuit qu'en débranchant son cordon électrique au niveau de cette prise.
- L'appareil fonctionne à une tension extrêmement basse de sécurité qui est conforme à la norme IEC 60950. Ces conditions ne sont maintenues que si l'équipement auquel il est raccordé fonctionne dans les mêmes conditions.

France et Pérou uniquement:

Ce groupe ne peut pas être alimenté par un dispositif à impédance à la terre. Si vos alimentations sont du type impédance à la terre, ce groupe doit être alimenté par une tension de 230 V (2 P+T) par le biais d'un transformateur d'isolement à rapport 1:1, avec un point secondaire de connexion portant l'appellation Neutre et avec raccordement direct à la terre (masse).

Cordon électrique - Il doit être agréé dans le pays d'utilisation	
Etats-Unis et Canada:	Le cordon doit avoir reçu l'homologation des UL et un certificat de la CSA.
	Les spécifications minimales pour un câble flexible sont AWG No. 18, ou AWG No. 16 pour un câble de longueur inférieure à 2 mètres. - type SV ou SJ - 3 conducteurs
	Le cordon doit être en mesure d'acheminer un courant nominal d'au moins 10 A.
	La prise femelle de branchement doit être du type à mise à la terre (mise à la masse) et respecter la configuration NEMA 5-15P (15 A, 125 V) ou NEMA 6-15P (15 A, 250 V).
Danemark:	La prise mâle d'alimentation doit respecter la section 107-2 D1 de la norme DK2 1a ou DK2 5a.
Suisse:	La prise mâle d'alimentation doit respecter la norme SEV/ASE 1011.
Europe	La prise secteur doit être conforme aux normes CEE 7/7 ("SCHUKO") LE cordon secteur doit porter la mention <HAR> ou <BASEC> et doit être de type HO3VVF3GO.75 (minimum).

Bitte unbedingt vor dem Einbauen des RPU die folgenden Sicherheitsanweisungen durchlesen:

WARNUNG: Die Installation und der Ausbau des Geräts darf nur durch Fachpersonal erfolgen.

- Diese Anleitung ist für die Benutzung durch Netzwerkadministratoren vorgesehen, die für die Installation und das Einstellen von Netzwerkkomponenten verantwortlich sind; sie setzt Erfahrung bei der Arbeit mit LANs (Local Area Networks) voraus.
- Das Gerät sollte nicht an eine ungeerdete Wechselstromsteckdose angeschlossen werden.
- Das Gerät muß an eine geerdete Steckdose angeschlossen werden, welche die internationalen Sicherheitsnormen erfüllt.
- Der Gerätestecker (der Anschluß an das Gerät, nicht der Wandsteckdosenstecker) muß einen gemäß EN 60320/IEC 320 konfigurierten Geräteeingang haben.
- Die Netzsteckdose muß in der Nähe des Geräts und leicht zugänglich sein. Die Stromversorgung des Geräts kann nur durch Herausziehen des Gerätenetzkabels aus der Netzsteckdose unterbrochen werden.
- Der Betrieb dieses Geräts erfolgt unter den SELV-Bedingungen (Sicherheitskleinstspannung) gemäß IEC 60950. Diese Bedingungen sind nur gegeben, wenn auch die an das Gerät angeschlossenen Geräte unter SELV-Bedingungen betrieben werden

Stromkabel. Dies muss von dem Land, in dem es benutzt wird geprüft werden:	
Schweiz	Dieser Stromstecker muß die SEV/ASE 1011 Bestimmungen einhalten.
Europe	Das Netzkabel muß vom Typ HO3VVF3GO.75 (Mindestanforderung) sein und die Aufschrift <HAR> oder <BASEC> tragen. Der Netzstecker muß die Norm CEE 7/7 erfüllen ("SCHUKO").

Warnings and Cautionary Messages

- Warning:** This product does not contain any serviceable user parts.
- Warning:** Installation and removal of the unit must be carried out by qualified personnel only.
- Warning:** When connecting this device to a power outlet, connect the field ground lead on the tri-pole power plug to a valid earth ground line to prevent electrical hazards.
- Warning:** This switch uses lasers to transmit signals over fiber optic cable. The lasers are compliant with the requirements of a Class 1 Laser Product and are inherently eye safe in normal operation. However, you should never look directly at a transmit port when it is powered on.
- Caution:** Wear an anti-static wrist strap or take other suitable measures to prevent electrostatic discharge when handling this equipment.
- Caution:** Do not plug a phone jack connector in the RJ-45 port. This may damage this device. Les raccordeurs ne sont pas utilisés pour le système téléphonique!
- Caution:** Use only twisted-pair cables with RJ-45 connectors that conform to FCC standards.

Warnings (in German)

- Achtung:** Dieses Produkt enthält keine Teile, die eine Wartung vom Benutzer benötigen.
- Achtung:** Installation und Deinstallation des Gerätes müssen von qualifiziertem Servicepersonal durchgeführt werden.
- Achtung:** Wenn das Gerät an eine Steckdose angeschlossen wird, muß der Masseanschluß am dreipoligen Netzstecker mit Schutzterde verbunden werden, um elektrische Gefahren zu vermeiden.
- Achtung:** Dieses Gerät nutzt Laser zur Signalübertragung über Glasfasern. Die Laser entsprechen den Anforderungen an eine Lasereinrichtung der Klasse 1 und sind durch ihre Bauart im normalen Betrieb sicher für die Augen. Trotzdem sollte niemals direkt in den einen Übertragungskanal geblickt werden, wenn er eingeschaltet ist.

Environmental Statement

The manufacturer of this product endeavours to sustain an environmentally-friendly policy throughout the entire production process. This is achieved though the following means:

- Adherence to national legislation and regulations on environmental production standards.
- Conservation of operational resources.
- Waste reduction and safe disposal of all harmful un-recyclable by-products.
- Recycling of all reusable waste content.
- Design of products to maximize recyclables at the end of the product's life span.
- Continual monitoring of safety standards.

End of Product Life Span

This product is manufactured in such a way as to allow for the recovery and disposal of all included electrical components once the product has reached the end of its life.

Manufacturing Materials

There are no hazardous nor ozone-depleting materials in this product.

Documentation

All printed documentation for this product uses biodegradable paper that originates from sustained and managed forests. The inks used in the printing process are non-toxic.

Purpose

This guide details the hardware features of the switch, including Its physical and performance-related characteristics, and how to install the switch.

Audience

The guide is intended for use by network administrators who are responsible for installing and setting up network equipment; consequently, it assumes a basic working knowledge of LANs (Local Area Networks).

Diese Anleitung ist für die Benutzung durch Netzwerkadministratoren vorgesehen, die für die Installation und das Einstellen von Netzwerkkomponenten verantwortlich sind; sie setzt Erfahrung bei der Arbeit mit LANs (Local Area Networks) voraus.

TABLE OF CONTENTS

1	About the Redundant Power Unit	1-1
	Overview	1-1
	Features and Benefits	1-1
	Front and Rear Panels	1-2
	LEDs	1-2
2	Installing the Redundant Power Unit	2-1
	Installation	2-1
	Selecting a Site	2-1
	Equipment Checklist	2-2
	Package Contents	2-2
	Optional Rack-Mounting Equipment	2-2
	Mounting	2-3
	Rack Mounting	2-3
	Desktop or Shelf Mounting	2-6
	Connecting Switches to the RPU	2-6
A	Troubleshooting	A-1
	Diagnosing RPU Indicators	A-1
	Power and Cooling Problems	A-2
	Installation	A-2
B	Specifications	B-1
	Physical Characteristics	B-1
	Compliances	B-2

TABLE OF CONTENTS

CHAPTER 1: ABOUT THE REDUNDANT POWER UNIT

Overview

This Redundant Power Unit (SMCRPU14) can supply 600 Watts of backup power to four switches in the event of an AC loss or failure of an internal power supply.

Features and Benefits


- Supports four switch units with 12 VDC supply of up to 150 W.
- Indicator LEDs located on the front panel.
- RPU AC line cord can draw power from a different supply circuit.
- DC line cords provide backup power to attached devices.
- Thermal overload protection prevents the RPU from overheating if a thermal overload occurs.
- Over-voltage protection shuts down an output channel if the voltage exceeds a preset threshold.
- Over-current protection shuts down the RPU if the output load exceeds a preset threshold.

- Short-circuit protection prevents the RPU from being damaged from a short circuit on any output channel.
- The RPU will operate under a no-load condition.

Front and Rear Panels

Four status indicators Link, Activity, Fan, Thermal, and Power indicators are located on the RPU's front panel. While the AC supply and DC backup receptacles are located on the RPU's rear panel.

Figure 1-1 Front and Rear Panels

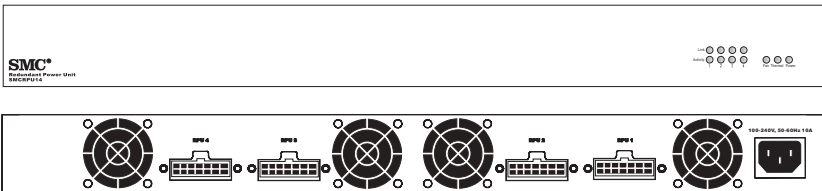

LEDs

The following diagram and tables describe the functions of the LEDs.

Figure 1-2 LEDs

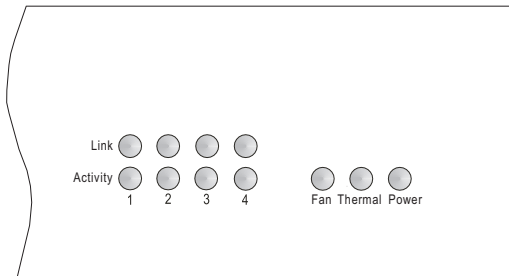


Table 1-1 Port Status LEDs

LED (1-4)	Condition	Status
Link	Off	The port does not have a valid connection to a switch.
	On Yellow	The port has a valid connection to a switch.
	Flashing Yellow	There has been an RPU internal power failure.
Activity	Off	The port is not providing power to the connected switch.
	Flashing Green	The port has been shut down due to one of the following conditions: The unit has detected an over-current condition. One or more of the unit's fans have failed.
	On Green	The port is providing power to a connected switch.

Table 1-2 System LEDs

LED	Condition	Status
Fan	On Green	The fans are functioning normally.
	Flashing Yellow	One or more fans are not operating properly.
	Off	The unit is powered off.
Thermal	On Green	The temperature of the unit is within an acceptable range.
	Flashing Yellow	Indicates a high temperature that is approaching an over-temperature condition.
	Off	The thermal unit has failed, or the unit is powered off.
Power	On Green	AC power is being supplied to the RPU.
	Off	No AC power is being supplied to the RPU.

CHAPTER 2:

INSTALLING THE

REDUNDANT POWER UNIT

Installation

The RPU may be placed on a desktop or mounted in a rack.

Caution: DO NOT place the RPU on the floor as the case is not waterproof. It is recommended that this RPU be installed in a network equipment rack.

Selecting a Site

RPU units can be mounted in a standard 19-inch equipment rack or on a flat surface. Be sure to follow the guidelines below when choosing a location.

- The site should:
 - be at the center of all the devices you want to link and near a power outlet.
 - be able to maintain its temperature within 0 to 45 °C (32 to 110 °F) and its humidity within 5% to 95%, non-condensing
 - provide adequate space (approximately two inches) on all sides for proper air flow
 - be accessible for installing, cabling and maintaining the devices
 - allow the status LEDs to be clearly visible

- Make sure that a separate grounded power outlet that provides 100 to 240 VAC, 50-60 Hz, is within 2 m (6.56 feet) of each device and is powered from an independent circuit breaker. As with any equipment, using a filter or surge suppressor is recommended.

Equipment Checklist

After unpacking the RPU, check the contents to be sure you have received all the components. Then, before beginning the installation, be sure you have all other necessary installation equipment.

Package Contents

- Redundant Power Unit (SMCRPU14)
- One AC Supply Power Cord — US, Continental Europe or UK
- Four DC Backup Power Cords with IEC connectors on both ends (length 152 cm/59.84 inches each)
- Rack Mounting Kit containing brackets and screws
- Adhesive feet
- Registration Card

Optional Rack-Mounting Equipment

If you plan to rack-mount the RPU, be sure to have the following equipment available:

- Four mounting screws for each device you plan to install in a rack—these are not included
- A screwdriver (Phillips or flathead, depending on the type of screws used)

Mounting

RPU units can be mounted in a standard 19-inch equipment rack or on a desktop or shelf. Mounting instructions for each type of site follow.

Rack Mounting


Before rack mounting the unit, pay particular attention to the following factors:

- **Temperature:** Since the temperature within a rack assembly may be higher than the ambient room temperature, check that the rack-environment temperature is within the specified operating temperature range.
- **Mechanical Loading:** Do not place any equipment on top of a rack-mounted unit.
- **Circuit Overloading:** Be sure that the supply circuit to the rack assembly is not overloaded.
- **Grounding:** Rack-mounted equipment should be properly grounded. Particular attention should be given to supply connections other than direct connections to the mains.

To rack-mount devices:


1. Attach the brackets to the device using the screws provided in the Bracket Mounting Kit.

Figure 2-1 Attaching the Brackets

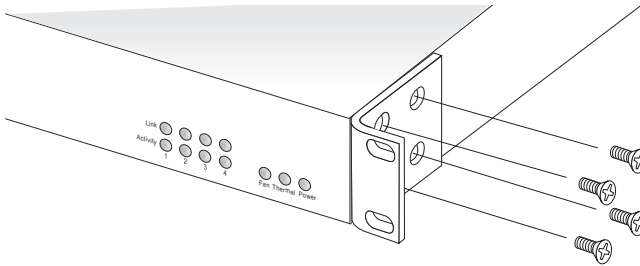

2. Mount the device in the rack, using four rack-mounting screws (not provided).

Figure 2-2 Installing the RPU in a Rack

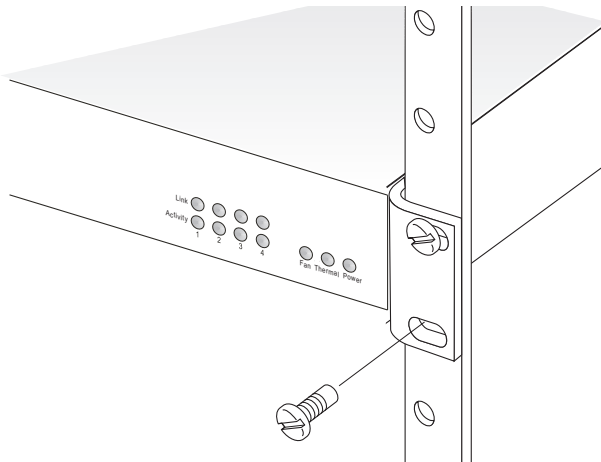

3. If also installing RPUs, mount them in the rack below the other devices.

Montage (Rack Mounting - German)

SMCRPU14 RPU-Einheiten können an ein standardmäßiges 19-Zoll Einrichtungsrack, einen Arbeitstisch oder ein Regal montiert werden. Folgend finden Sie die Montageanweisungen für jeden Positionstyp.

Rack-Montage

Beachten Sie die folgenden Faktoren, bevor Sie die Rack-Montage beginnen:

- **Temperatur:** Da die Temperatur innerhalb einer Rackeinheit höher als die Raumumgebungstemperatur sein kann, stellen Sie bitte sicher, dass die Rackumgebungstemperatur innerhalb des angegebenen Betriebstemperaturbereichs liegt. (Siehe "Temperatur" auf Seite C-1.)
- **Mechanische Last:** Stellen Sie kein Gerät auf eine Rack-Montageeinheit.
- **Stromüberlastung:** Stellen Sie sicher, dass der Netzkreis der Rackeinheit nicht überlastet wird.
- **Erdung:** Die Rack-Montageeinheit muss richtig geerdet werden. Besondere Acht sollten Sie bei Verbindungen geben, die nicht direkt zum Netz führen.

So montieren Sie Geräte an ein Rack:


1. Befestigen Sie die Metallwinkel mit den im Metallwinkel-Montageset erhältlichen Schrauben an dem Gerät.
2. Befestigen Sie das Gerät mit vier Rackmontageschrauben (nicht beigelegt) an dem Rack.
3. Wenn Sie nur einen Switch installieren, dann springen Sie bitte über zu "Verbinden mit einer Stromquelle" auf Seite -6 am Ende dieses Kapitels.

Wenn Sie mehrere Switches installieren möchten, dann montieren Sie sie untereinander in einer beliebigen Reihenfolge.

Desktop or Shelf Mounting

1. Attach the four adhesive feet to the bottom of the first RPU unit.

Figure 2-3 Attaching the Adhesive Feet

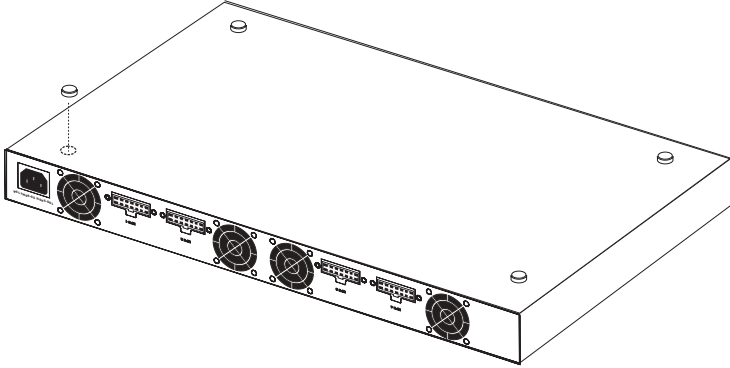

2. Set the device on a flat surface near an AC power source, making sure there are at least five centimeters or two inches of space on all sides for proper air flow.


Connecting Switches to the RPU

Caution: DO NOT connect the RPU to an AC power source until DC power cords have been connected to the supported switches.

To connect switches to the RPU:


1. Connect one end of an AC cord to the AC receptacle on each supported switch, and the other end to a grounded power outlet.

Figure 2-4 Power Receptacle

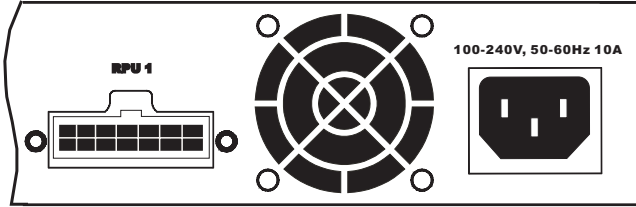

2. Connect one end of a DC cord to the redundant power receptacle on the supported switch and the other end to an available receptacle on the RPU.
3. Repeat steps 1 and 2 for connecting up to four supported switches to the RPU.
4. Connect one end of the AC cord to the AC receptacle on the RPU, and the other end to a grounded power outlet.
5. Check the LEDs on the RPU to ensure proper operation. The Link LEDs for connected switches should light up. If the LEDs indicate otherwise, see “Troubleshooting” on page A-1 for more information.

Figure 2-5 Connecting the RPU in a Stack

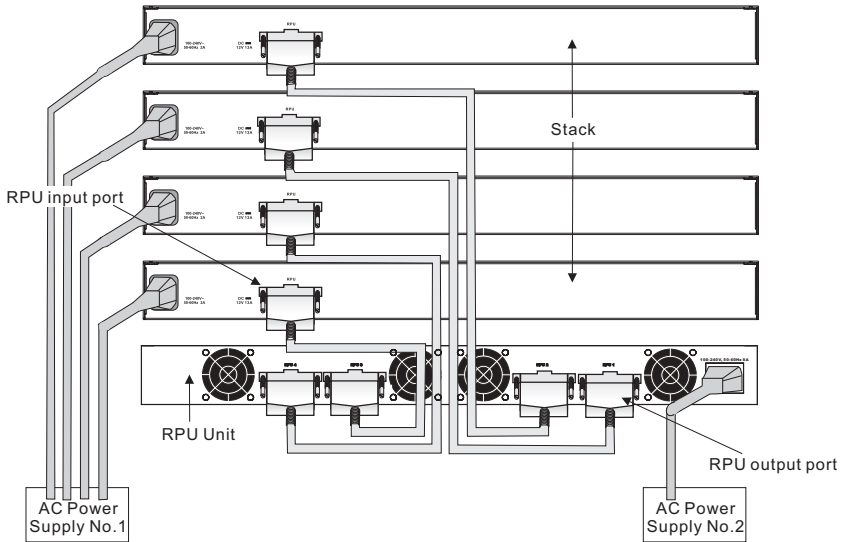

Note: For International use, you may need to change the AC line cord. You must use a line cord set that has been approved for the receptacle type in your country.

APPENDIX A

TROUBLESHOOTING

Diagnosing RPU Indicators

Table A-1 Troubleshooting Chart

Symptom	Action
Power LED is Off	<ul style="list-style-type: none">• Internal power supply is disconnected.• Check connections between the RPU, the power cord, and the wall outlet.• Contact Technical Support.
Link LED is Off	<ul style="list-style-type: none">• The port does not have a valid connection to a switch.• Check connections between the RPU and the switch.• Check that power is being supplied to the RPU.
Link LED is Flashing Yellow	<ul style="list-style-type: none">• There has been an RPU internal power failure.• Contact Technical Support.
Activity LED is Flashing Green	<ul style="list-style-type: none">• The port has been shut down due to one of the following conditions:<ul style="list-style-type: none">- The unit has detected an over-current condition.- One or more of the unit's fans have failed.• Check if the Fan LED is off, which indicates a fan failure.• Check that the attached switch does not require more than 150 W of power.• Power cycle the RPU to clear the condition.• If the condition persists, contact Technical Support.
Fan LED is Flashing Yellow	<ul style="list-style-type: none">• One or more fans are not operating properly.• Replace the unit as soon as possible.

Table A-1 Troubleshooting Chart

Symptom	Action
Fan LED is Off	<ul style="list-style-type: none">• The unit is powered off.
Thermal LED is Flashing Yellow	<ul style="list-style-type: none">• Indicates a high temperature that is approaching an over-temperature condition.• Check that the unit's cooling fans are operating normally.• Power off the RPU unit and allow to cool.• If the condition persists, contact Technical Support.

Power and Cooling Problems

If the PWR LED does not turn on when the power cord is plugged in, you may have a problem with the power outlet, power cord, or internal power supply. However, if the unit powers off after running for a while, check for loose power connections, power losses or surges at the power outlet, and verify that the fans on the unit are unobstructed and running prior to shutdown. If you still cannot isolate the problem, then the internal power supply may be defective. In this case, contact your distributor for assistance.

Installation

Verify that all system components have been properly installed. If one or more components appear to be malfunctioning (such as the power cord or RPU cable), test them in an alternate environment where you are sure that all the other components are functioning properly.

APPENDIX B.

SPECIFICATIONS

Physical Characteristics

Ports

4 RPU DC power outlets (IEC socket 216C743-07)

LEDs

Port: Link, Activity

System: Power, Fan, Thermal

Weight

5.5 kg (12.1 lbs)

Size

44.0 x 32.3 x 4.3 cm (17.34 x 12.6 x 1.69 in.)

Temperature

Operating: 0 to 45 °C (32 to 110 °F)

Storage: -40 to 70 °C (-40 to 158 °F)

Humidity

Operating: 20% to 90%

AC Input

100 to 240 V, 50 to 60 Hz

EIA Ratings

10 A @ 125 VAC

10 A @ 250 VAC

DC Power Cable Connector

14-pin P-Type connector

Power Supply

Internal, auto-ranging transformer: 100 to 240 VAC, 50 to 60 Hz
Output 11.5 VDC

Power Consumption

644 W (Maximum)
161 W (Maximum per port)

Maximum Current

7.8 A @ 110 VAC
3.5 A @ 240 VAC

Overload Protection

Ports are shutdown when output exceeds 150 W

Power Supply

+12 VDC
Initial accuracy: +/- 1%
Current: 2 A (minimum), 10 A (maximum)
Line regulation: +/- 1%
Load regulation: +/- 10%
Overshoot and undershoot: 5%

Compliances

CE Mark

Emissions

FCC Class B
Industry Canada Class B
CISPR Class B
VCCI Class B
AS/NZS 3548 (1995) Class B

Immunity

EN 55024

Safety

CSA/ C US (CSA 60950-00 & UL60950)

CB: IEC 60950

EN 60950 (TÜV/GS)

INDEX

A

adhesive feet, attaching 2-6
air flow requirements 2-1

B

brackets, attaching 2-4

C

CE Mark 0-iv
compliances 0-iii
 EMC B-2
 safety B-3
contents of package 2-2
cooling problems A-2
cord sets, international 2-8

D

desktop mounting 2-6

E

EC conformance 0-iv
EMC/safety compliance 0-iii
equipment checklist 2-2

F

front panel of RPU 1-2

G

grounding for racks 2-3

I

installation
 desktop or shelf mounting 2-6
 power requirements 2-2
 problems A-2
 rack mounting 2-3
 site requirements 2-1

L

LED indicators
 problems A-1
location requirements 2-1

M

mounting the RPU
 in a rack 2-3
 on a desktop or shelf 2-6

P

package contents 2-2
power, connecting to 2-7
problems, troubleshooting A-1

R

rack mounting 2-3
rear panel of RPU 1-2
RPU
 installing in a rack 2-4
rubber foot pads, attaching 2-6

S

screws for rack mounting 2-2
site selection 2-1

INDEX

specifications

compliance B-2

environmental B-1

physical B-1

power B-2

standards

compliance B-2

IEEE B-2

standards compliance 0-iii

surge suppressor, using 2-2

T

temperature within a rack 2-3

troubleshooting

in-band access A-2

power and cooling problems A-2

RPU indicators A-1

FOR TECHNICAL SUPPORT, CALL:

From U.S.A. and Canada (24 hours a day, 7 days a week)
(800) SMC-4-YOU; (949) 679-8000; Fax: (949) 679-1481
From Europe (8:00 AM - 5:30 PM UK Time)
44 (0) 118 974 8700; Fax: 44 (0) 118 974 8701

INTERNET

E-mail addresses:
techsupport@smc.com
european.techsupport@smc-europe.com
Driver updates:
[http://www.smc.com/index.cfm?action=tech support drivers downloads](http://www.smc.com/index.cfm?action=tech%20support%20drivers%20downloads)
World Wide Web:
<http://www.smc.com/>
<http://www.smc-europe.com/>

FOR LITERATURE OR ADVERTISING RESPONSE, CALL:

U.S.A. and Canada:	(800) SMC-4-YOU;	Fax (949) 679-1481
Spain:	34-93-477-4935;	Fax 34-93-477-3774
UK:	44 (0) 118 974 8700;	Fax 44 (0) 118 974 8701
France:	33 (0) 41 38 32 32;	Fax 33 (0) 41 38 01 58
Italy:	39 02 739 12 33;	Fax 39 02 739 14 17
Benelux:	31 33 455 72 88;	Fax 31 33 455 73 30
Central Europe:	49 (0) 89 92861-0;	Fax 49 (0) 89 92861-230
Switzerland:	41 (0) 1 9409971;	Fax 41 (0) 1 9409972
Nordic:	46 (0) 868 70700;	Fax 46 (0) 887 62 62
Northern Europe:	44 (0) 118 974 8700;	Fax 44 (0) 118 974 8701
Eastern Europe:	34 -93-477-4920;	Fax 34 93 477 3774
Sub Saharian Africa:	27-11 314 1133;	Fax 27-11 314 9133
North Africa:	34 93 477 4920;	Fax 34 93 477 3774
Russia:	7 (095) 290 29 96;	Fax 7 (095) 290 29 96
PRC:	86-10-6235-4958;	Fax 86-10-6235-4962
Taiwan:	886-2-2659-9669;	Fax 886-2-2659-9666
Asia Pacific:	(65) 238 6556;	Fax (65) 238 6466
Korea:	82-2-553-0860;	Fax 82-2-553-7202
Japan:	81-45-224-2332;	Fax 81-45-224-2331
Australia:	61-2-9416-0437;	Fax 61-2-9416-0474
India:	91-22-8204437;	Fax 91-22-8204443

If you are looking for further contact information, please visit www.smc.com or www.smc-europe.com.



Networks

38 Tesla
Irvine, CA 92618
Phone: (949) 679-8000

Model Numbers: SMC RPU14
Publication Number: 150200050500A E012005-R01