 


Quick Installation Guide

Wireless N Range Extender

Copyrights 2013 by TOTOLINK All rights reserved. Website: <http://www.totolink.net>
Information in this document is subject to change without prior notice.

1 Hardware Connection

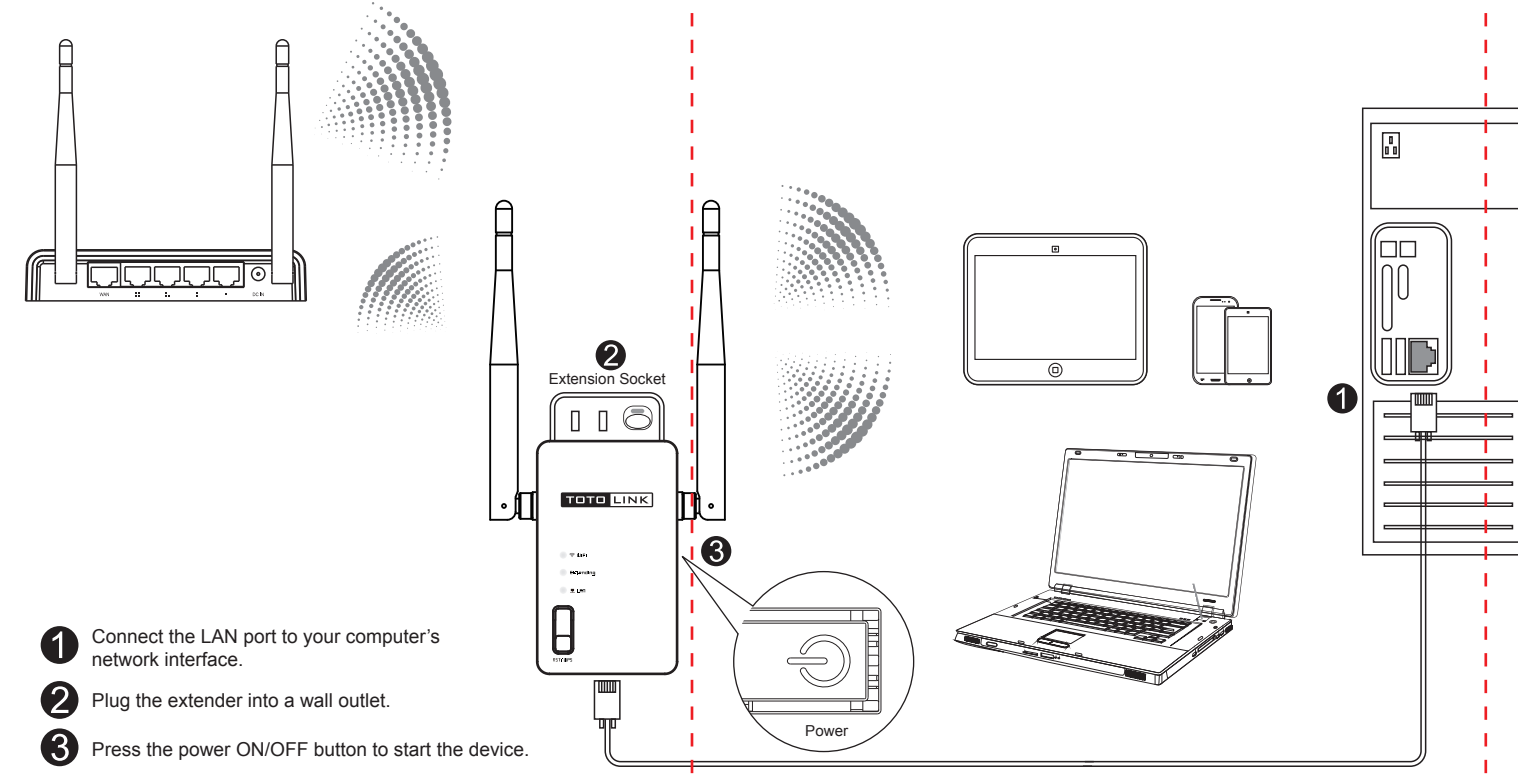

LED Indicators		
Names	Status	Description
WiFi	On	WiFi is on but no data transmitting exists
	Blink	Successful wireless connection with data transmitting
Extending	On	Connection with upper AP has been completed
	Off	No connection with upper AP
LAN	On	Successfully connected with the LAN port and no data transmitting exists
	Blink	Successfully connected with the LAN port with data transmitting
	Off	There is no device linked to the LAN port


Button and Port Description	
Name	Description
Power	This button can turn on/off the device. Press the button for about 10 seconds, the device will restore to factory default settings.
Rst/WPS	WPS push button for secured easy connection to a wireless network. Press the button for about 5 seconds, it is WPS working.
LAN	This port is used to connect to PC.

NOTE:
The default Network Name (SSID) of EX300 is TOTOLINK EX300 (No encryption). After repeater with other Router/AP successfully, the SSID and password of the extender will change to the connected router/AP's SSID and password. So before following operation, please make sure you have the SSID and password of the router/AP you need this extender to connect. Besides, TOTOLINK Extender can repeater with many other brands routers/APs.

2-1 Establish Connection

Method One: Connected by button

 - Press the Rst/WPS button on EX300.
- Press the Rst/WPS button on wireless router for about 5 seconds at the same time. After 5 seconds, a secure connection will be established automatically.

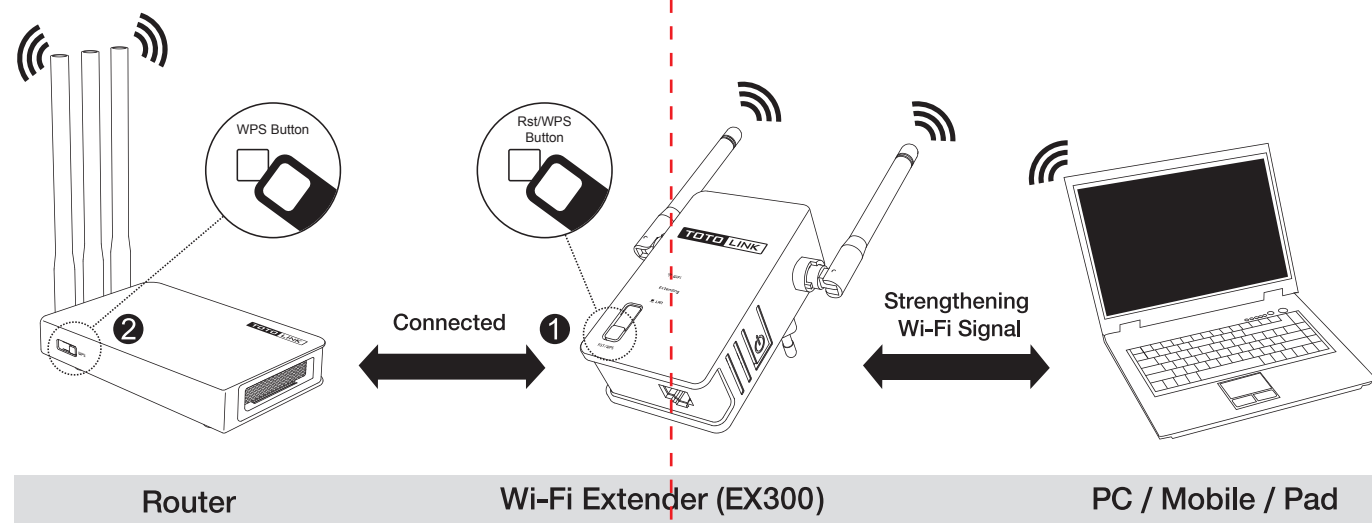


Method two: Connecting by Web Setting_Part A

First, please setup your PC.

- For Windows 2000 or Windows XP Operating System, please comply with following steps to set up.

 - Right-click "My Network Places", click "Properties"
- Right-click "Local Area Connection", click "Properties"
- Double-click "Internet Protocol (TCP/IP)"
- Configure the IP address manually:
IP Address: 192.168.1.x (x can be ranged from 1-253)
Subnet mask: 255.255.255.0
Default gateway: 192.168.1.254
Click OK.

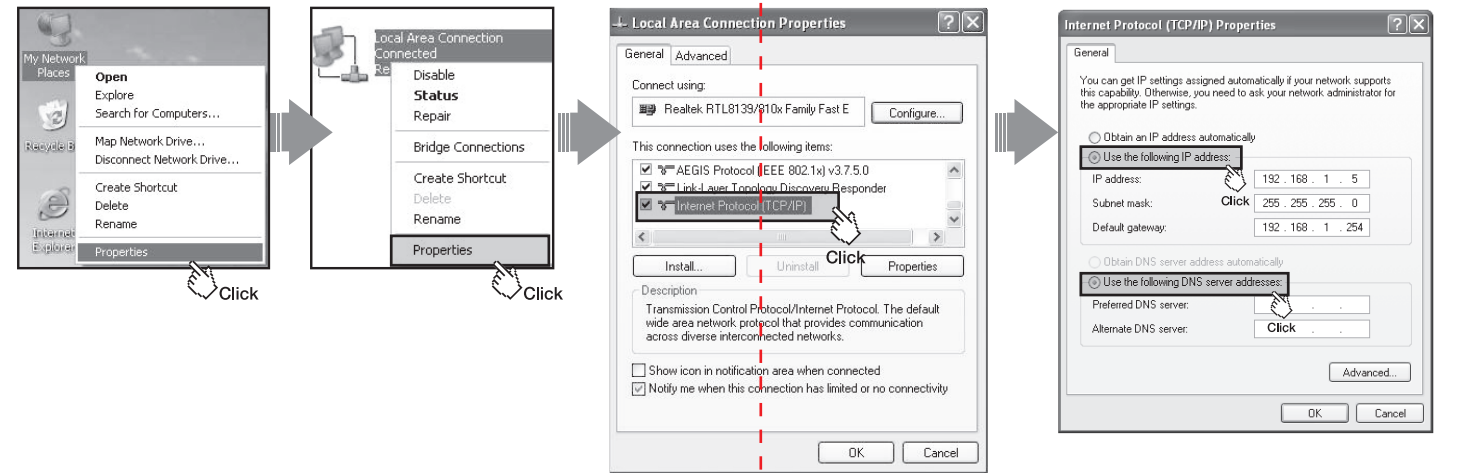


2-2 Establish Connection


Method two: Connecting by Web Setting_Part B

- For Windows Vista or Windows 7 Operating System, please comply with following steps to set up.

 - Click "Start—Control Panel—Network and Internet—Network Connection", right-click "Local Area Connection", and choose "Properties".
- Double-click "Internet Protocol Version 4 (TCP/IPv4)"
- Configure the IP address manually:
IP Address: 192.168.1.x (x can be ranged from 1-253)
Subnet mask: 255.255.255.0
Default gateway: 192.168.1.254
Click OK.

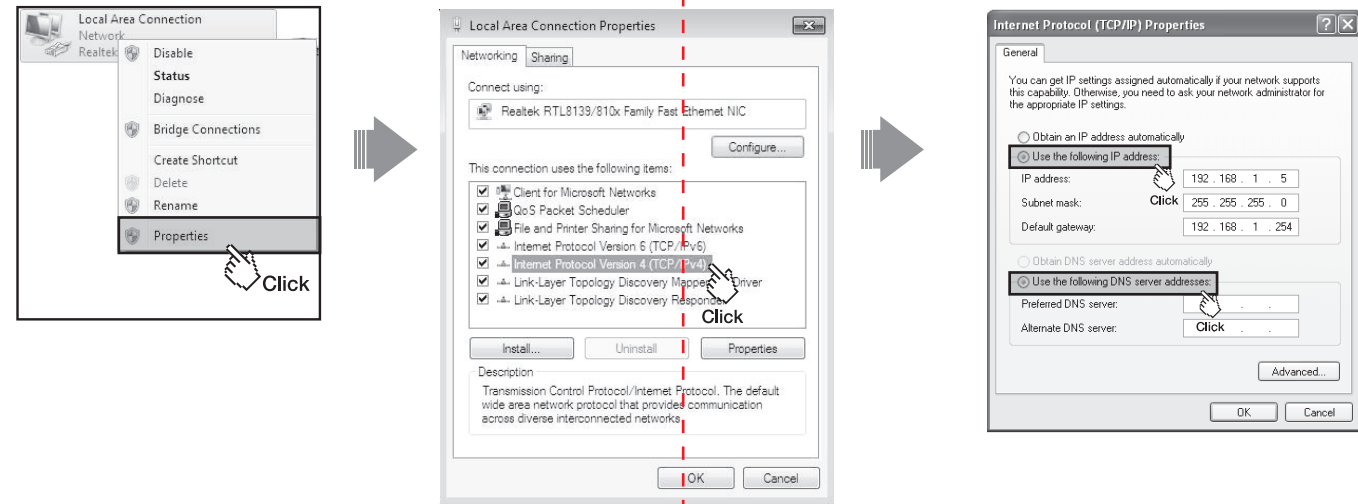

3 Wireless Network Connection

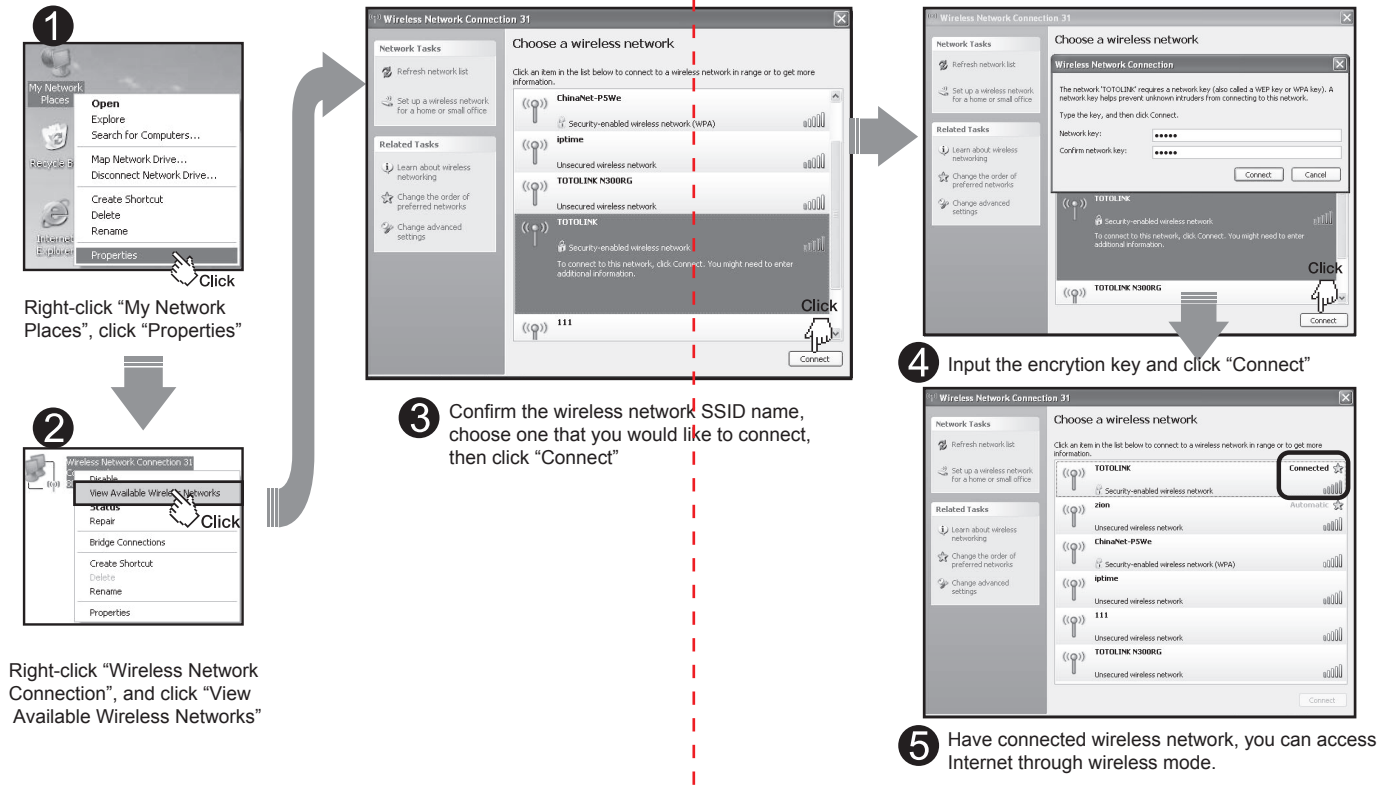 

Second, please setup the extender.

- Typing 192.168.1.254 in the address field of Web Browser. Then press Enter key.
- Click Setup Tool:
- Enter User Name and Password. Both are admin in lower case letters.

- Click Extender Setup, choose Start to enable repeater function.
- Click Search AP.

- Select one SSID, click Select AP.
- If the SSID you selected is encrypted, it will pop up below window reminding you to input the network key to connect. Click OK.

- Enter the right Encryption key to connect. Then click Apply.