



Outdoor Long Range 802.11a/n 5GHz Wireless AP/CPE/Bridge (2T2R)

Package Content

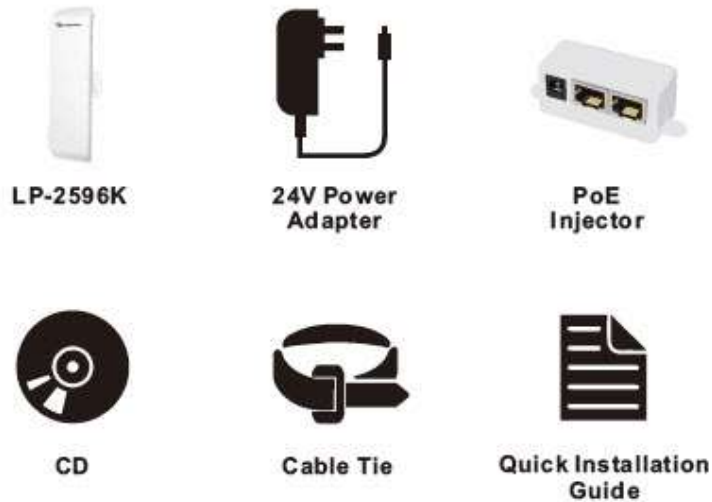

Quick Installation Steps

1. Take off the water-proof sliding cover.
2. Connect the **Main** Ethernet port of A405N with a RJ-45 8P8C cable.
3. Make the water-proof sliding cover well installed.
4. Connect PoE Injector to A405N as below diagram.
 - DC: Plug in the DC jack of 24V/1A power adapter
 - PoE port: Connect to Main Ethernet port with a RJ-45 8P8C cable.
 - LAN port: Connect to your computer/laptop for Web configuration.
 - Reset button: It allows user to remotely reset the system of A405N.

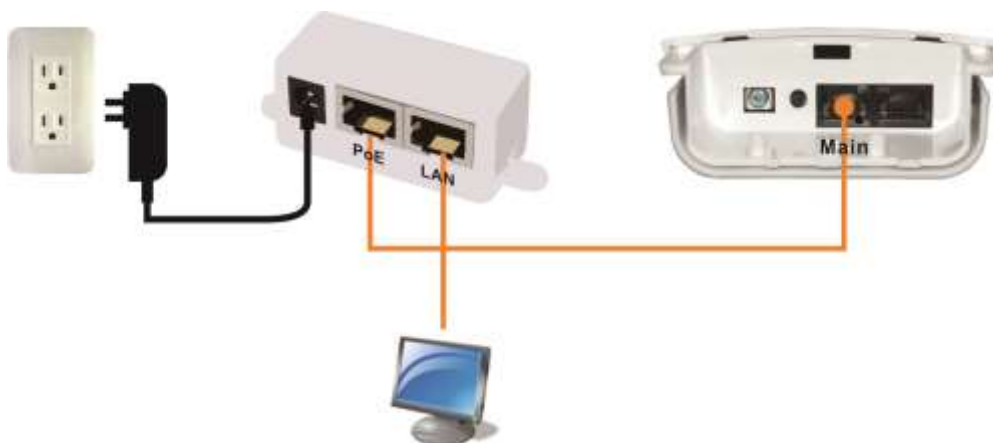

NOTE.

1. There is no software driver or utility installation needed.
2. RJ-45 8P8C Ethernet cable is required.
3. It takes about 60 seconds to complete the boot up sequence after A405N powered up.
4. A405N built in PoE pass through function on Secondary Ethernet port. It means the Secondary Ethernet port is able to provide 24V power for a secondary device and can be enabled on Web Configuration (Please refer to the statement on Advanced Setting of Radio menu).

Software Configuration

Network Connection Setup

The default IP of A405N is **192.168.1.200**. You have to make sure your computer is on the same network segment as A405N before connecting to A405N.

Example: In the Windows 7 operating system

1. Press Start and enter **ncpa.cpl** in search bar. You will see network connection page.
2. Select your network interface card and Right click to set Properties.
3. Double click *Internet Protocol Version 4 (TCP/IPv4)*.
4. Select *Specify an IP address* and enter the IP address.
IP Address: **192.168.1.x** (*x can be any number between 1 to 254 except for 200*)
Subnet Mask: **255.255.255.0**
Default Gateway: **192.168.1.200**
5. Click OK to complete the IP setting.

Get started with A405N

1. Open Web browser and enter **192.168.1.200** in the URL field of Web browser.



2. Enter “**admin**” as default user name, and “**admin**” as default password.



3. After successful login , you'll see the system status on the screen. Regarding to detailed Web configurations, please refer to user manual placed in product CD.